


FlexGo Duo

Model: S906D

Instruction manual

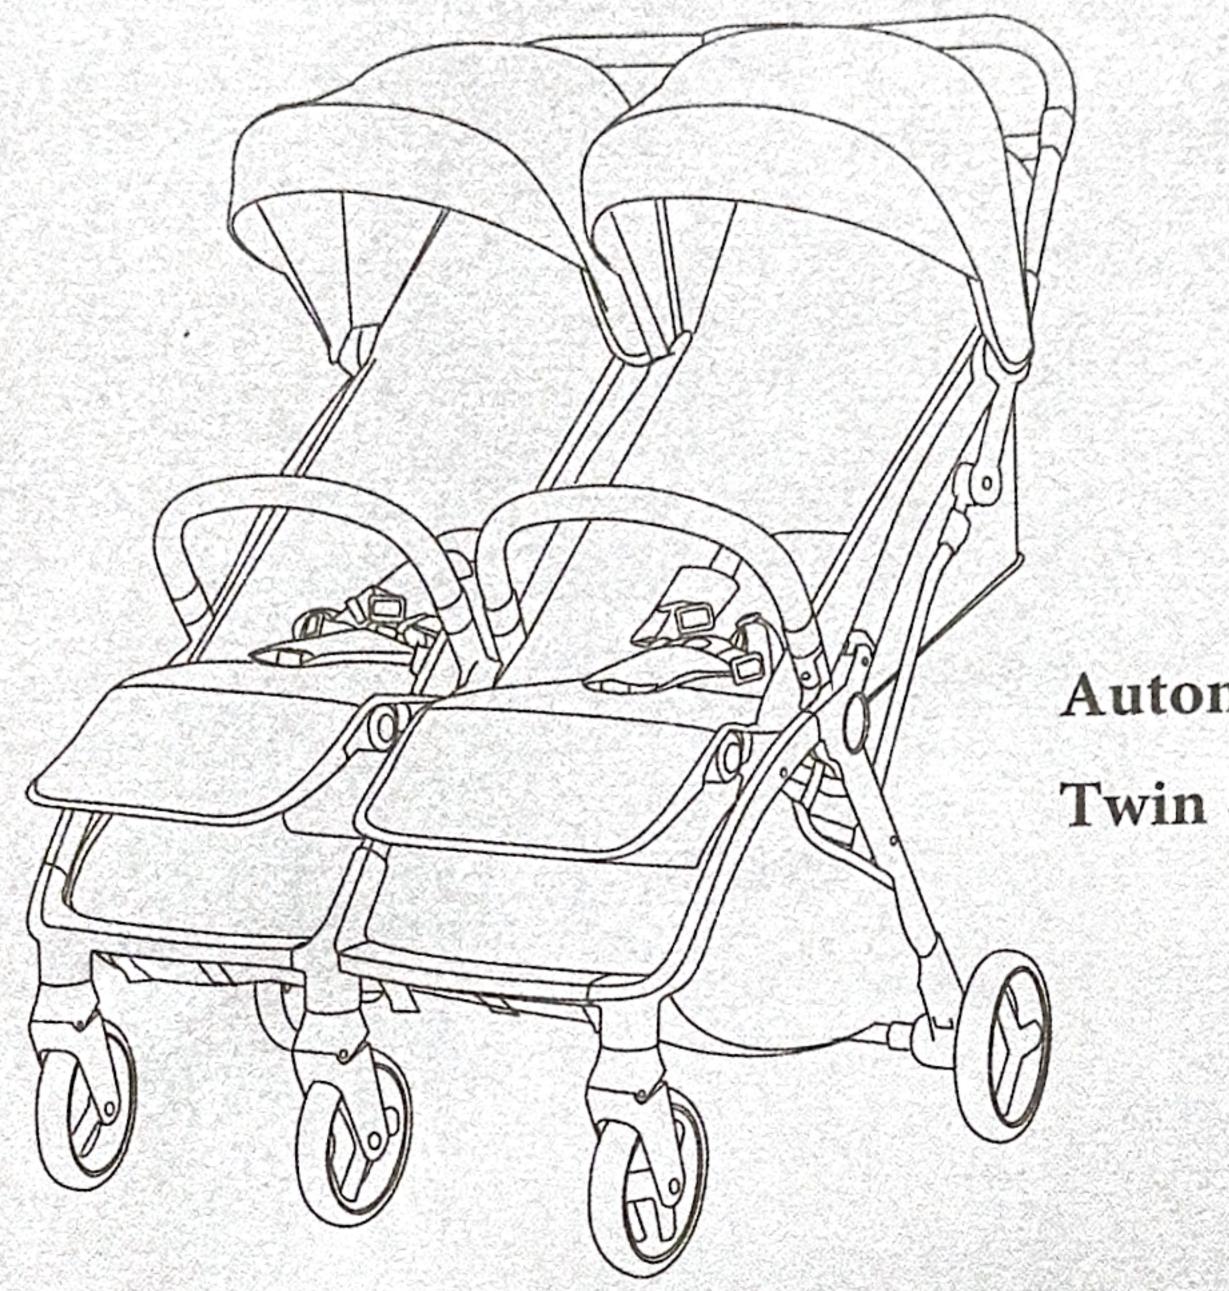

Automatic Fold Twin Stroller

Max 22kgs
Birth to approx. 4 years

IMPORTANT: PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

IMPORTANT: Please read these instructions carefully before use and keep for future reference.

This stroller complies with EN 1888-1:2018+A1:2022 & EN 1888-2:2018+A1:2022.

- WARNING NEVER LEAVE THE CHILD UNATTENDED
- WARNING ENSURE THAT ALL THE LOCKING DEVICES ARE ENGAGED BEFORE USE.
- WARNING TO AVOID INJURY ENSURE THAT THE CHILD IS KEPT AWAY
 WHEN FOLDING AND UNFOLDING THIS PRODUCT
- WARNING DO NOT LET THE CHILD PLAY WITH THIS PRODUCT
- WARNING ALWAYS USE THE HARNESS RESTRAINT SYSTEM
- WARNING THIS PRODUCT IS NOT SUITABLE FOR RUNNING OR SKATING
- WARNING ALWAYS APPLY THE BRAKE WHENEVER THE STROLLER IS STATIONARY.
- WARNING DO NOT CARRY EXTRA CHILDREN OR BAGS IN THIS STROLLER
- WARNING ALWAYS USE THE CROTCH STRAP OF THE HARNESS IN COMBINATION WITH THE WAIST AND SHOULDER BELT.
- WARNING WHEN NOT IN USE DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAP AND/OR BUCKLE.
- WARNING MAKE SURE CHILDREN ARE KEPT CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER.
- WARNING THIS STROLLER IS DESIGNED FOR USE FROM 0 TO APPROX. 4 YEARS
 OR UP TO 22KG per seat, WHICHEVER COMES FIRST. This stroller is
 only suitable for two children, with a maximum weight capacity of 44kg.
- WARNING THE MAXIMUM AUTHORIZED LOAD FOR THE SHOPPING BASKET IS 2KG.

- WARNING THE CHILD MUST BE SECURED AT ALL TIMES BY THE 5 POINT SAFETY HANDLE BAR MAY IMPAIR THE
- WARNING HANGING ITEMS OR LOADS ON THE HANDLE BAR MAY IMPAIR THE STROLLER'S STABILITY.
- WARNING BEFORE ASCENDING OR DESCENDING ESCALATORS OR STAIRS, ALWAYS REMOVE CHILD AND FOLD THE STROLLER.

 ALWAYS REMOVE CHILD AND FOLD THE STROLLER.
- WARNING KEEP THE STROLLER AWAY FROM OPEN FIRE, EXPOSED FLAME
 HEATERS AND OTHER SOURCES OF STRONG HEAT
- WARNING IT IS RECOMMENDED TO PERIODICALLY CLEAN ALL MOVING PARTS IN ORDER TO MAINTAIN PROPER FUNCTIONING OF THE STROLLER.
- WARNING IT IS RECOMMENDED TO REGULARLY TEST AND CHECK THAT THE LOCKING MECHANISM IS FUNCTIONING PROPERLY AND HAS NOT BEEN DAMAGED PRIOR TO USAGE.
- WARNING ENSURE THE BRAKE IS ENGAGED BEFORE PLACING YOUR BABY IN AND OR REMOVING YOUR BABY FROM THE STROLLER.

CARE AND MAINTENANCE


- Always use a non-toxic, non-abrasive cleaning agent or solvent to clean your stroller.
- It is recommended to use a solution of water and a small amount of mild, non-toxic detergent. Clean the stroller with a clean, damp cloth.
- The fabric parts may be removed and machine washed. (Max. Temp: 30°C)
 Do not use strong detergents or bleach.
- If you need to put your stroller in storage for any period of time, ensure storage area
 is well ventilated at all times and avoid storing in a damp, hot and or humid environment.
- Always use the rain cover when raining.
- If stroller does get wet, ensure it is thoroughly dry again before folding and storing it.

Unfolding








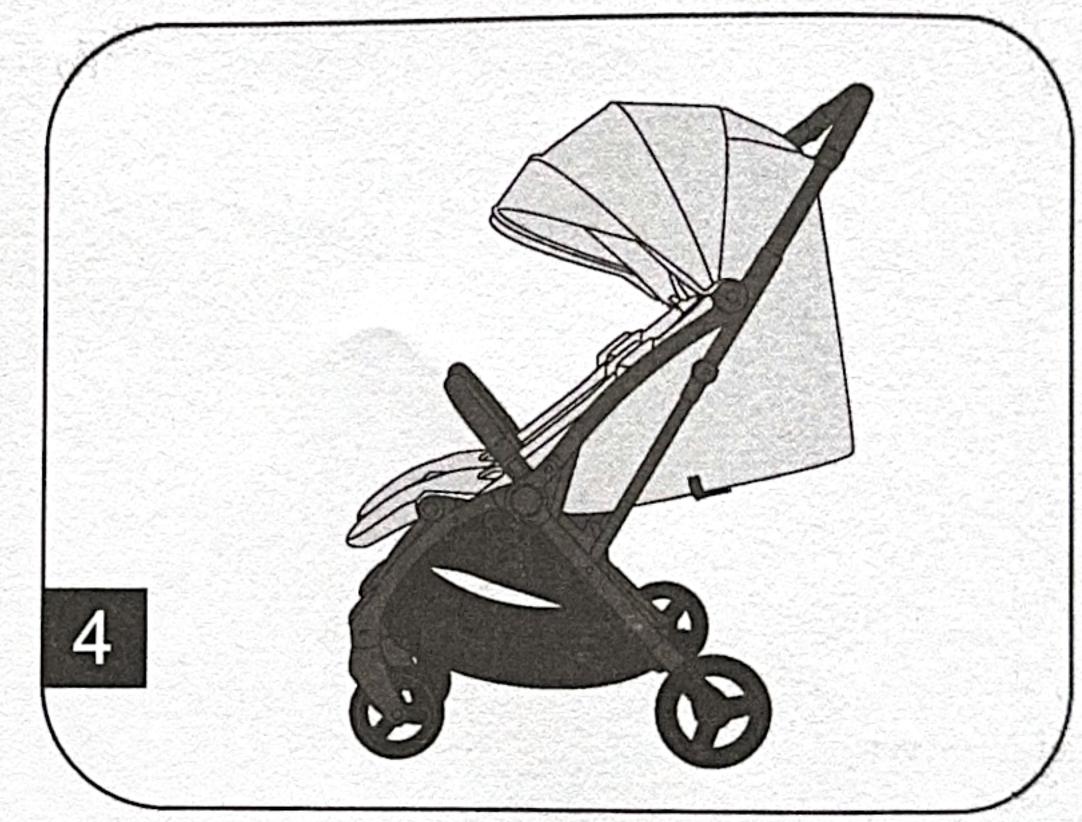



- 1. Open the folding lock (as show in pic .1 and pic2).
- 2. Lift the handlebar, then stroller unfolds (as show in pic.3 and pic.4).

Folding



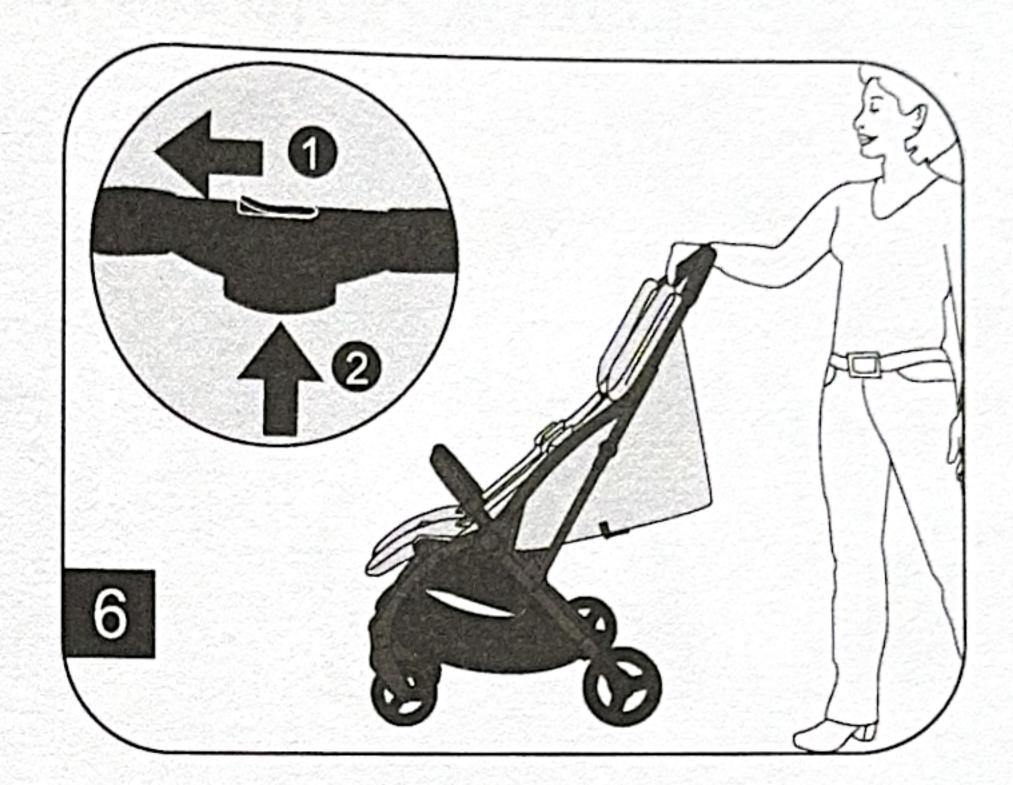

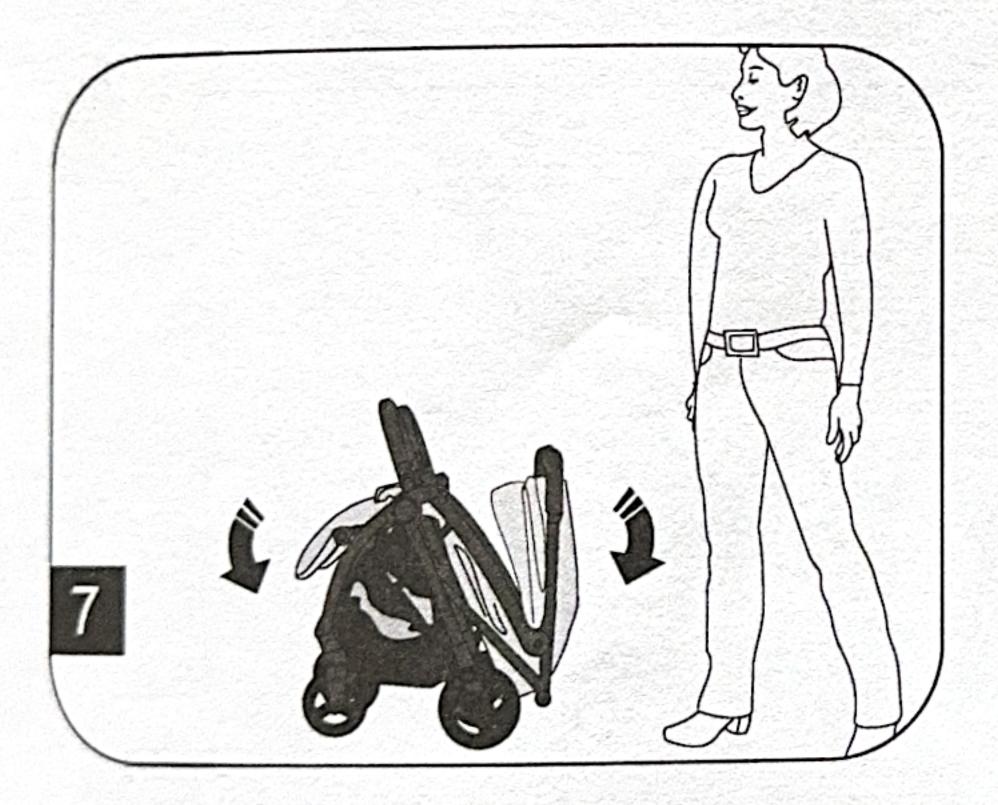


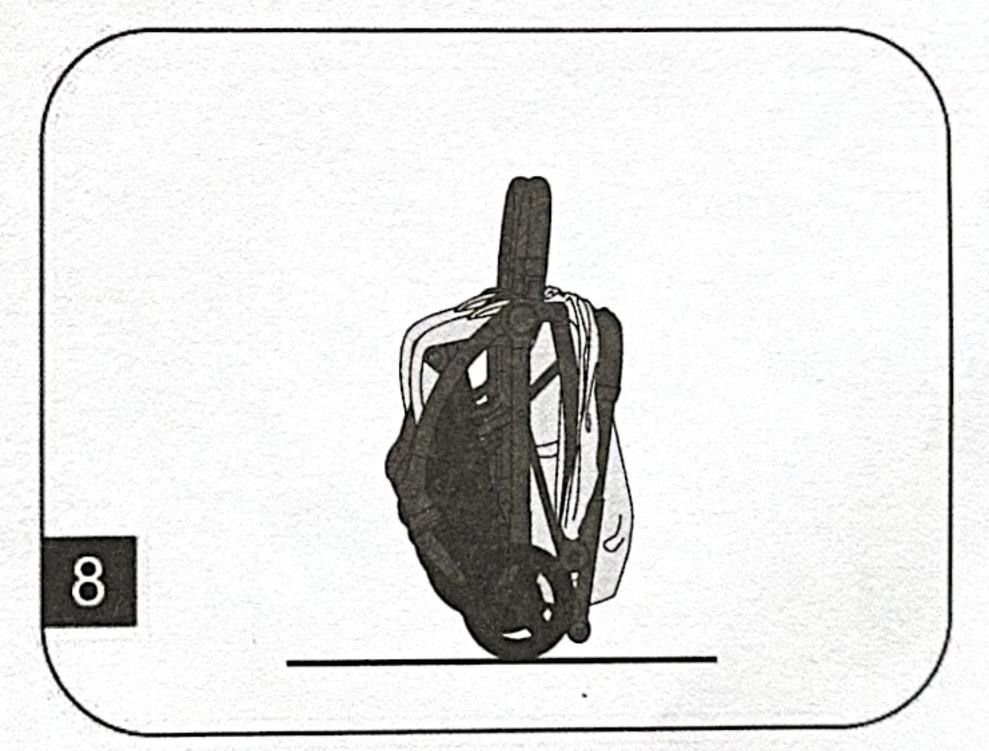


- 1. Please close the hood first(as pic.5)
- 2. Press the two keys simultaneously(as pic.6)
- 3. The stroller will be folded antomatically (as pic.7)

Seat Back Adjustment



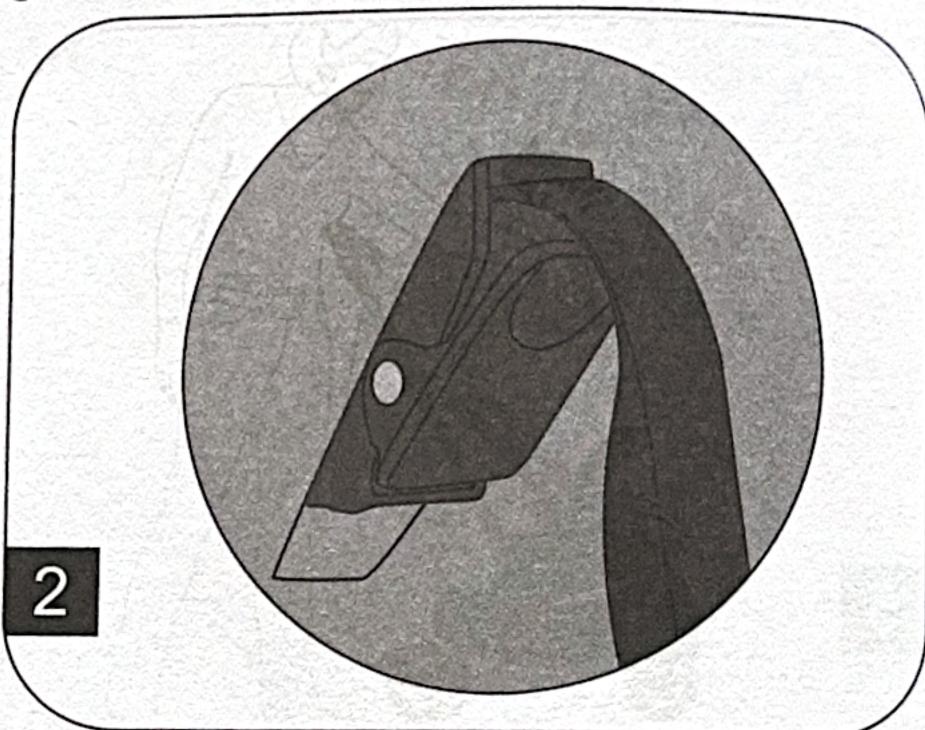



Legrest Adjustment

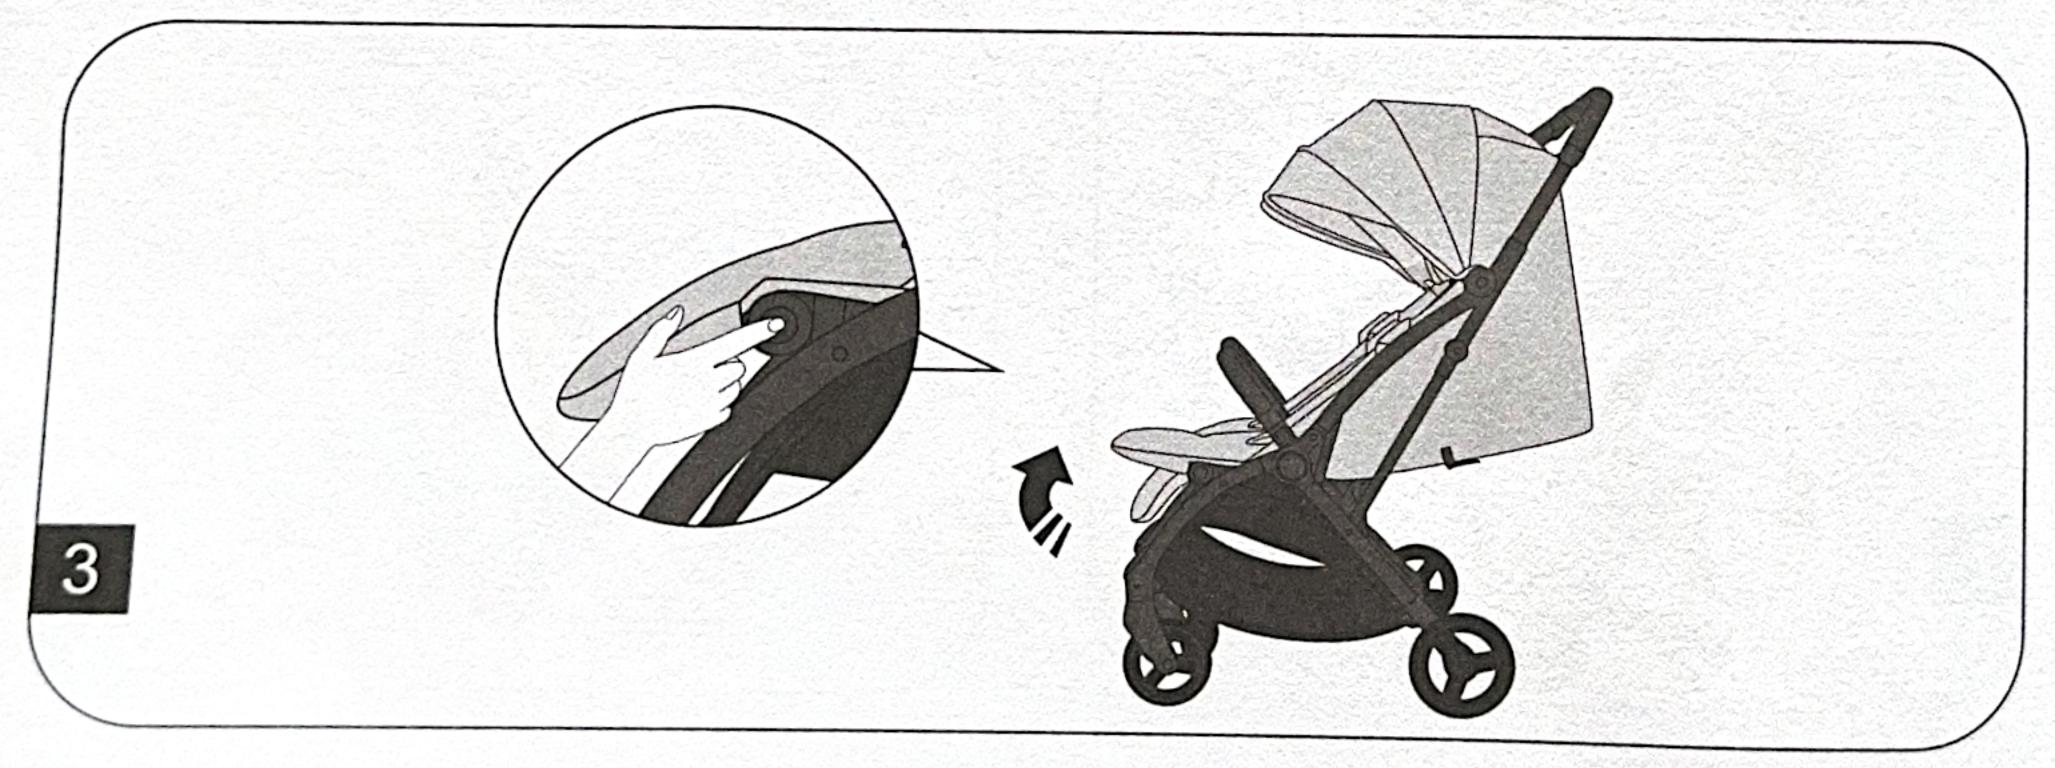


- The seat backrest can be adjusted from most upright position to reclined position by adjusting the buckle(as pic.1)
- 2. To adjust the legrest, press the buttons on both sides of the legrest to move it up or down. (as pic. 3)


Fasten&Loosen Seat Belt

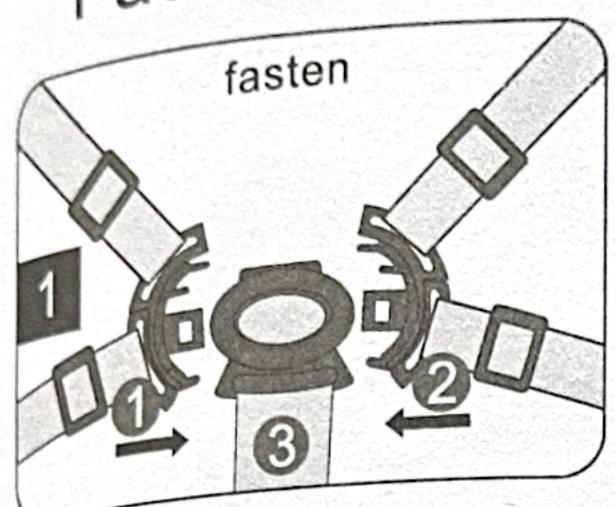


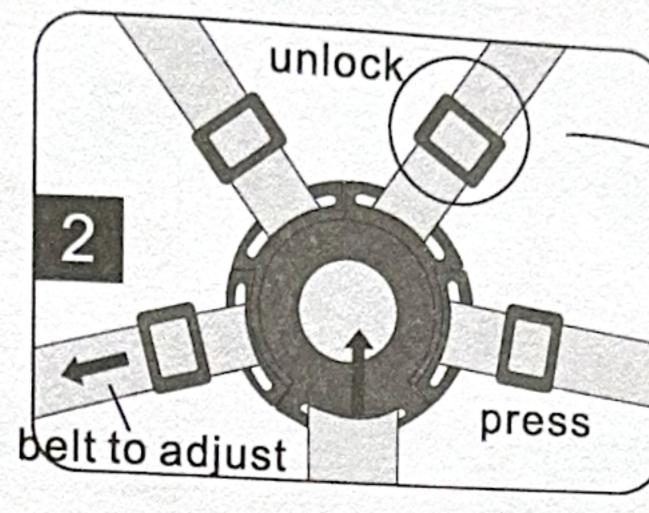

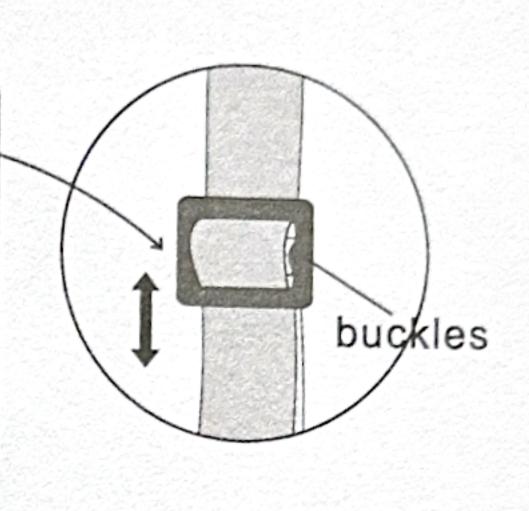



- 1.1and 2 are clasped on 3, then the seat belt can be fastened(as pic.1)
- 2.Press the middle button, then the seat belt can be loosened (as pic.1)
- 3.Safetybelt adjustment:pull one end of the safety belt and slide the button up and down to adjust the length of the belt
- 4. The shoulder strap can be adjusted in 2-position (as pic.3)
- 5. Take out the waist strap and shoulder strap from the hole in the backrest, insert it into the hole to be adjustable.
- 6.Insert the bumper into the jiont as pictures show u to fix the bumper(as pic.4)
- 7. Pull the plastic as the picture shows to take off the bumper (as pic.4)

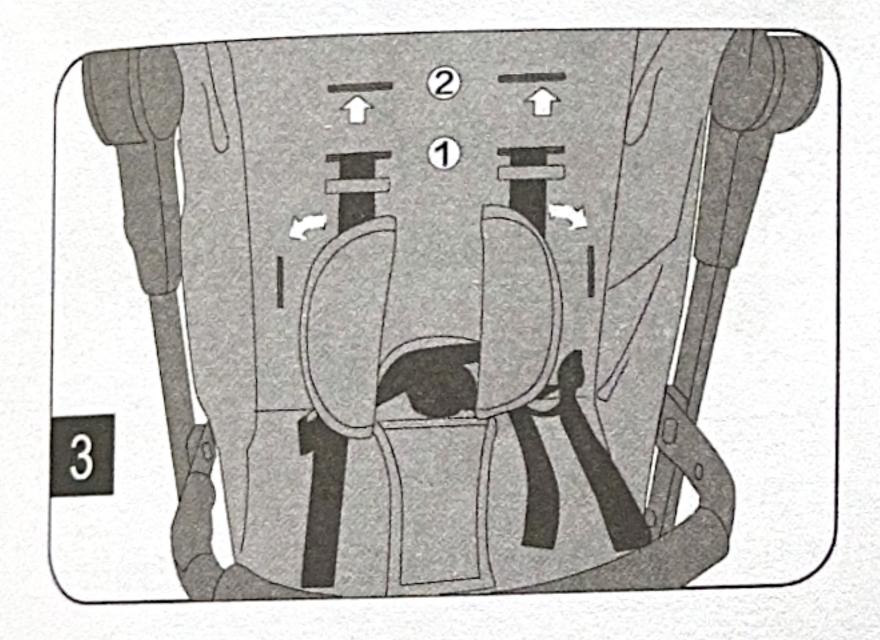

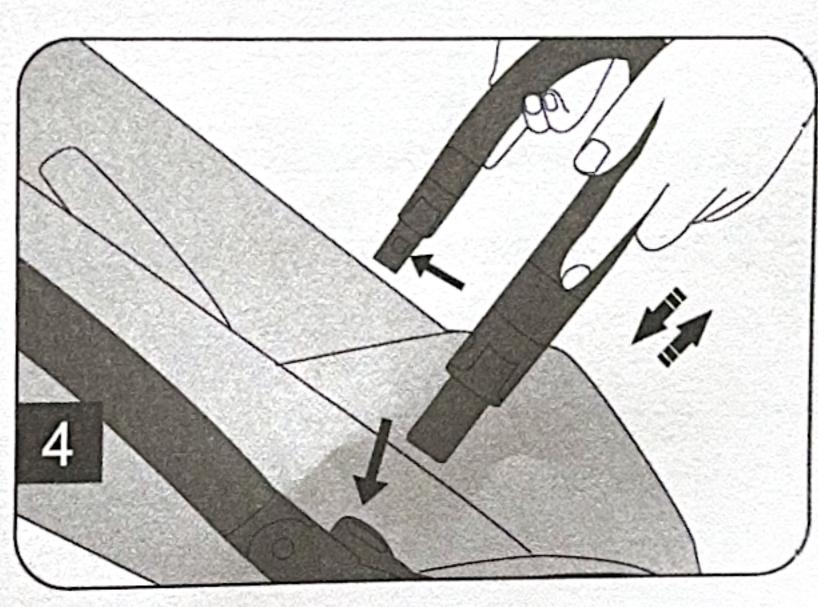

How to assemble the front wheels and rear wheels

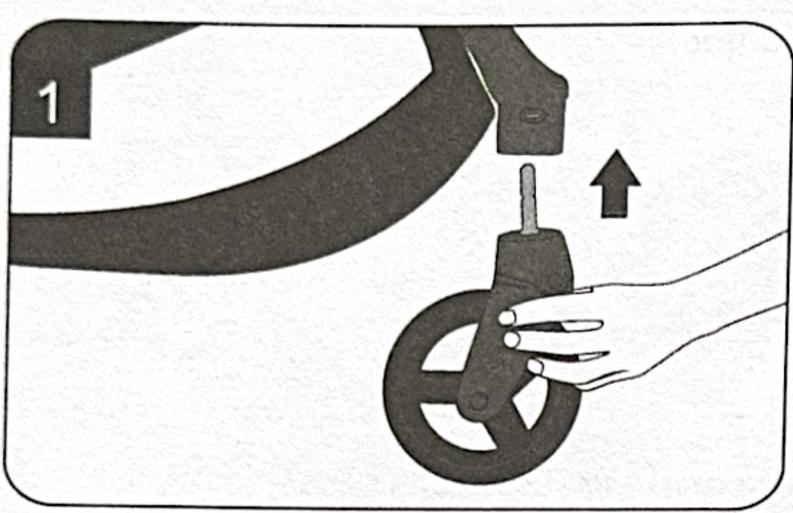


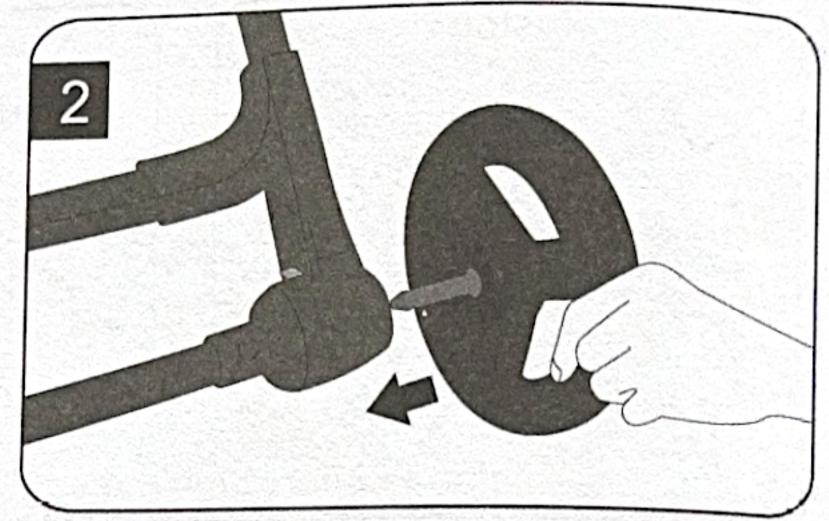


WARNING: Before use, ensure that the wheel units are safely locked into position.

- 1. Fit the front wheel unit to the stroller and lock it into position until there is a click sound(as pic.1) — Repeat this operation for the other wheel unit.
- 2. Fit the rear wheel unit to the stroller and lock it into position until there is a click sound(as pic.2) Repeat this operation for the other wheel unit.

Brake and unbrake

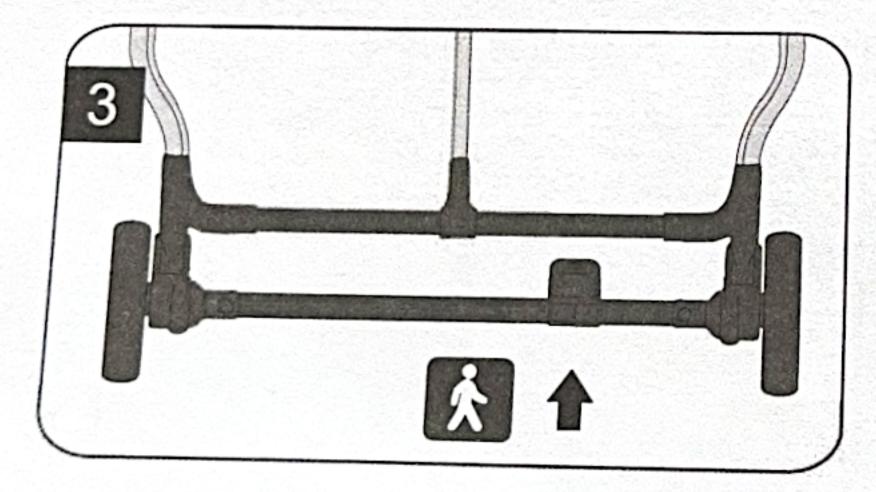

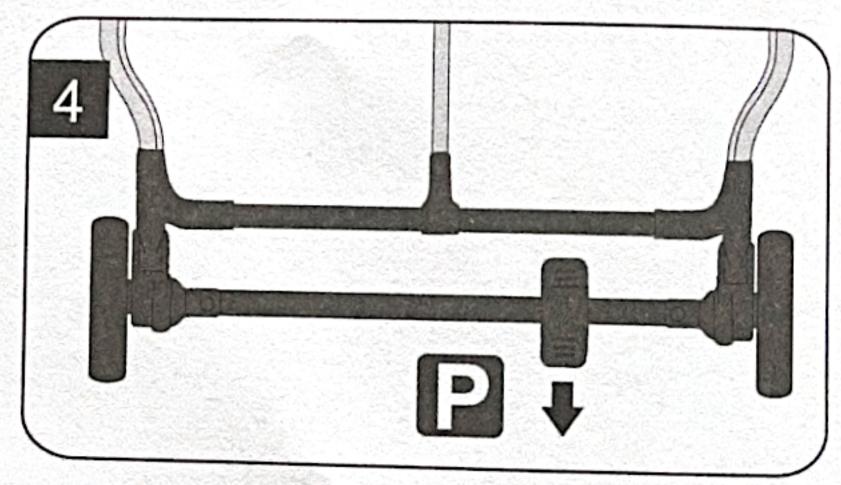

- 3. As shown in Figure 3, the top pedals can move forward.
- 4. As shown in Figure 4, step down the middle brake pedal to stop the stroller.