

KEEP INSTRUCTIONS FOR FUTURE USE. Read all instructions before using this stroller.

Safety Information

WARNING:

FOR THE SAFETY OF YOUR CHILD, PLEASE READ THE FOLLOWING WARNINGS AND INSTRUCTIONS AND KEEP FOR FUTURE REFERENCE.


- Adult assembly required.
- NEVER LEAVE CHILD UNATTENDED. ALWAYS keep child in view when in stroller.
- AVOID SERIOUS INJURY from falling or sliding out. ALWAYS use the harness system. Check frequently to make sure it is secure.
- ALWAYS keep fingers away from moving parts, when folding, unfolding or adjusting stroller to prevent finger entrapment.
- ALWAYS make sure stroller is fully open and locked before using.
- ALWAYS use the brakes when stroller is stopped.
- ALWAYS remove protective material and poly bags and dispose before assembly.
- NEVER put hot liquids in the cup holder.
- NEVER use stroller on stairs or escalators.
- **NEVER** rollerblade with stroller.
- **NEVER** allow children to play with or hang onto the stroller.
- **NEVER** allow children to climb into the stroller unassisted. Stroller may tip over and injure child.

- **NEVER** place or hang parcels, bags, or accessories on the handle or canopy. The stroller may tip over or the canopy may collapse.
- This product will become unstable if a parcel bag or rack is used when there is no provision for one.
- This product may become unstable if a parcel bag, other than the one recommended by the manufacturer is used.
- This product will become unstable if the manufacturer's recommended load is exceeded.
- Care must be taken when folding and unfolding the stroller to prevent finger entrapment.
- **DO NOT** carry additional children, goods, or accessories in or on this product except as recommended in the manufacturer's instructions.
- NEVER place more than 2 lb (.9 kg) in cup holder.
- **NEVER** place more than 10 lb (4.5 kg) in the storage basket. If weight is exceeded, hazardous unstable conditions may exist.
- NEVER place more than 1 lb (.5 kg) in the storage pocket.
- **STROLLER** is only for use with children up to 65 lb (29 kg), **AND WHEN SEATED**, the midpoint of your child's head is at or below the top of the stroller seat.
- ONLY use this stroller with ONE child at a time.
- STROLLER is for use with children who can sit up unassisted and is NOT recommended for newborns.
- Failure to follow the steps and warnings on the labels and in the instruction manual can result in serious injury or death to your child.


Contents

| Parts of Stroller | 1 |
|---|----|
| Installing & Removing Wheels | 2 |
| Unfolding Stroller Frame | 3 |
| Adjusting Handle | 4 |
| Using Parking Brake and Locking Swivel Wheel | 5 |
| Attaching Car Seat to Stroller Frame | 6 |
| Removing Car Seat from Stroller Frame | 7 |
| Reclining Stroller Seat | 8 |
| Canopy Use & Storage Basket Access Panel | 9 |
| Storage Basket & Pocket Use | 10 |

| Adjusting Stroller Seat Harness Straps | 11 |
|--|----|
| Securing Child in Stroller Seat | 13 |
| Folding Stroller | 14 |
| Removing Stroller Seat Pad Insert | 15 |
| Installing Stroller Seat Pad Insert | 16 |
| Cup Holder Use & Care | 17 |
| Wash & Care of Stroller Parts | 18 |
| Dorel Juvenile Group Information | 19 |
| Replacement Parts | 19 |
| Warranty | 19 |

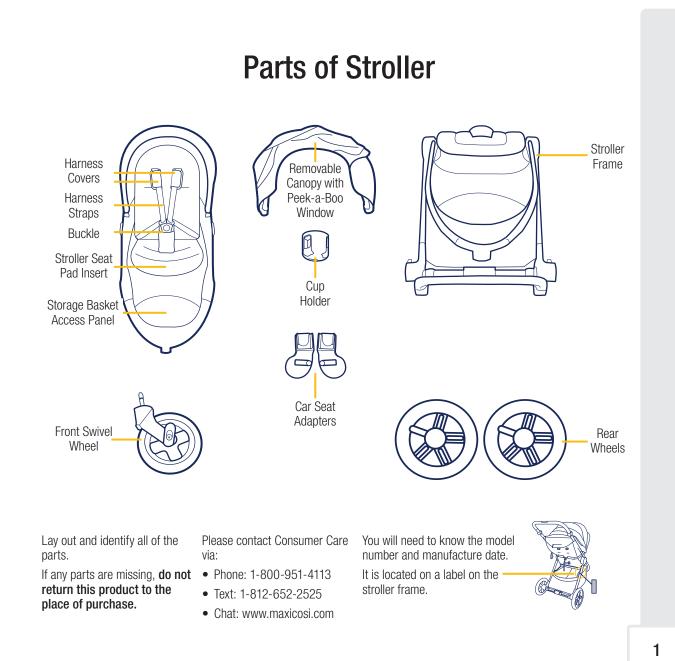

Installing & Removing Wheels

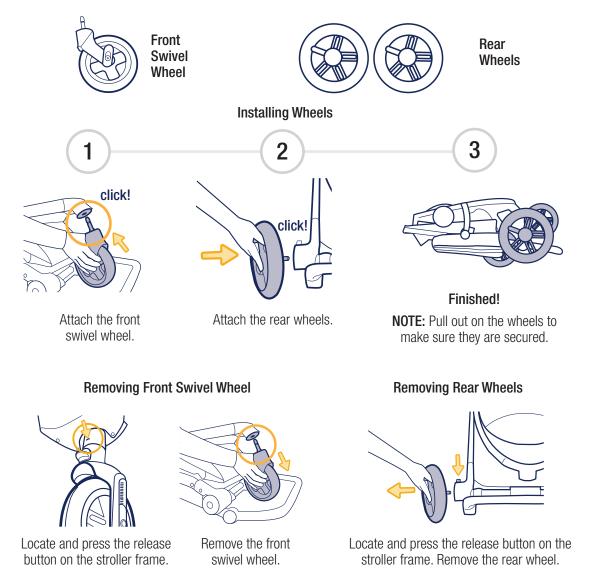

2

_

Unfolding Stroller Frame


Stroller Frame Latch





• Push in on the stroller frame to release the latch.

• Pull the stroller frame latch away from the stroller.

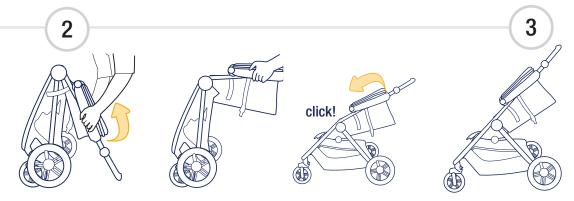

- Hold the stroller frame as shown and lift up.
- Continue to lift up until the stroller locks into place.


WARNING:

ALWAYS keep fingers away from moving parts, when folding, unfolding, or adjusting stroller to prevent finger entrapment.


Finished!

Adjusting Handle

This stroller's handle is adjustable and has 4 positions. Adjust to a position that is comfortable for you.

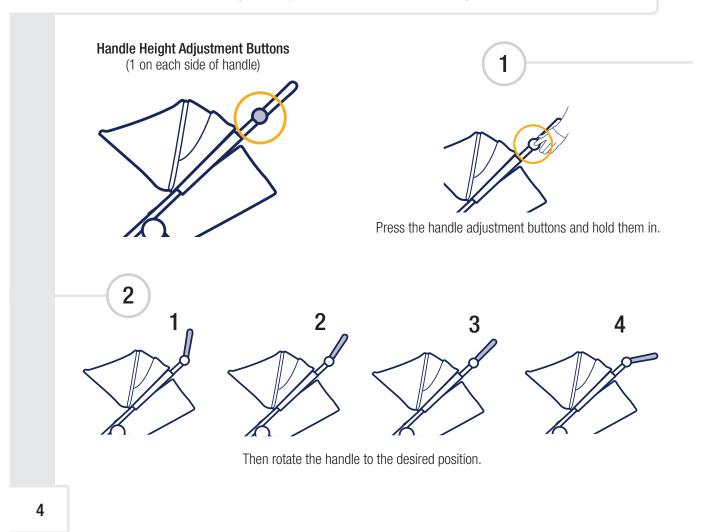


Using Parking Brake & Locking Swivel Wheel

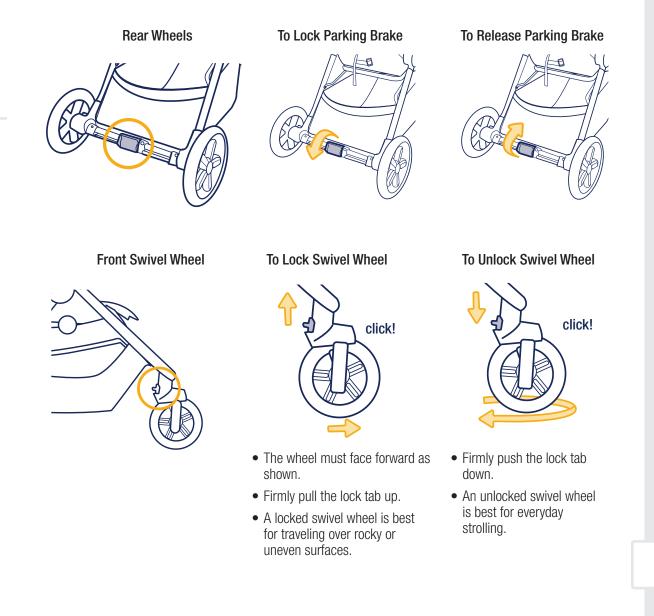

Attaching Car Seat to Stroller Frame

Illustrations show a generic car seat icon.

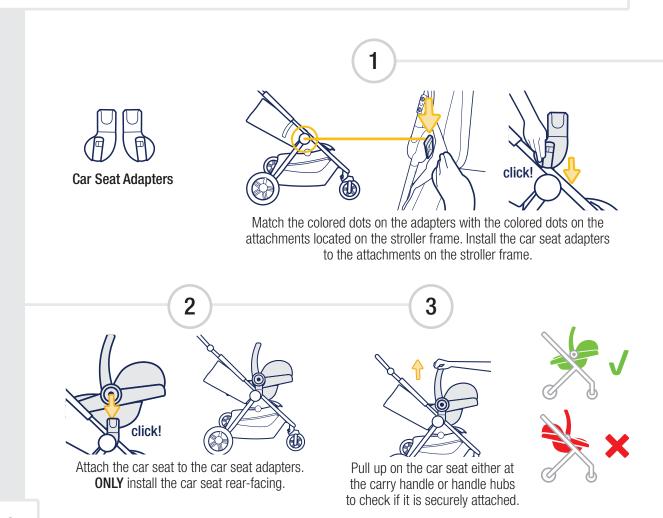

Removing Car Seat from Stroller Frame

Illustrations show a generic car seat icon. 2 Car seat stroller While engaging release mechanisms Mico Models' your car seat's **Stroller Release Buttons** & locations vary by stroller release car seat model. mechanism, lift Review your car seat's the car seat off instruction manual the stroller frame. to locate the stroller release mechanism on your car seat. Coral Models' Stroller Release Lever

Removing Car Seat Adapters

You can fold and store the stroller with the adapters still attached. You **must** remove the adapters before placing your child in the stroller seat.



Press the release button on the car seat adapters.

Remove the car seat adapters.


Reclining Stroller Seat

This stroller seat has multiple recline positions. Adjust to a position that is comfortable for your child.



Canopy Use & Storage Basket Access Panel


Removing & Attaching Canopy

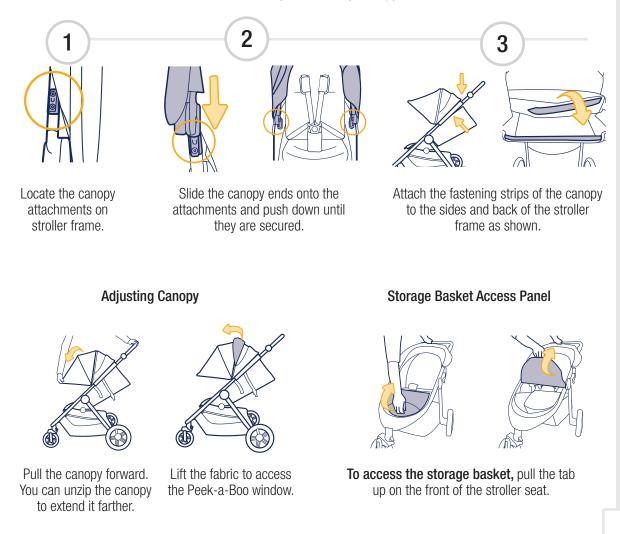



Adjusting Stroller Seat Harness Straps


As your child grows, you will need to adjust the harness strap height. Harness System 3 2 1 Unbuckle. From the back of the seat, Pull the harness strap push the harness retainers out of the harness slot. through the harness slots. 4 5 **WARNING**: Belts must be threaded exactly as shown. • Failure to follow these 2 instructions could result in serious injury or death Push the harness retainers From the back of the seat, of your child. into the harness slot closest pull the harness retainers to your child's shoulders. through the harness slots.

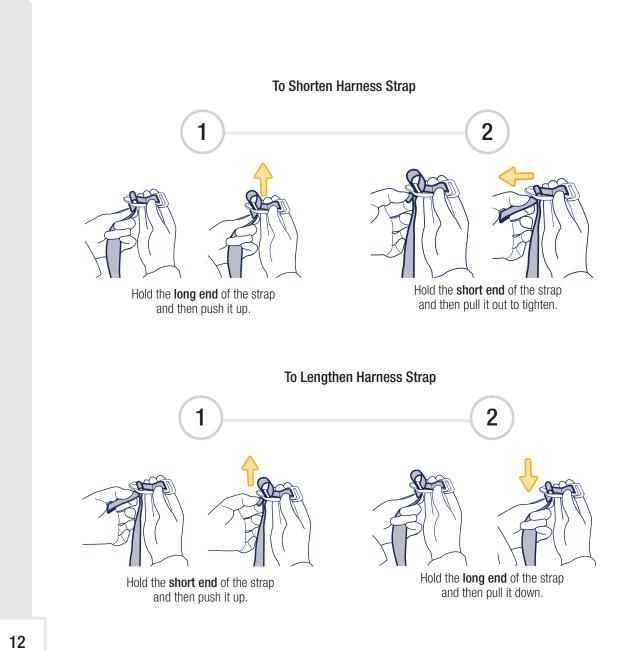

Securing Child in Stroller Seat




13

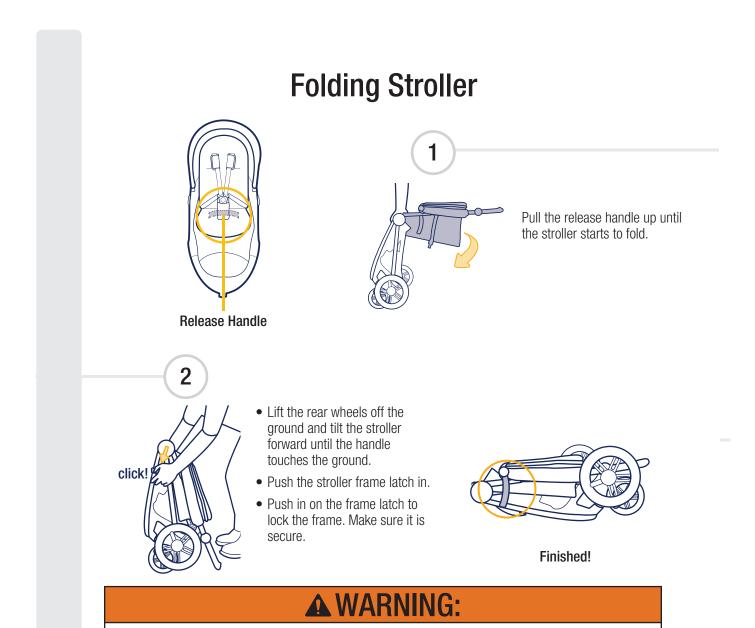


ALWAYS keep fingers away from moving parts, when folding, unfolding, or adjusting stroller to prevent finger entrapment.

14

Removing Stroller Seat Pad Insert

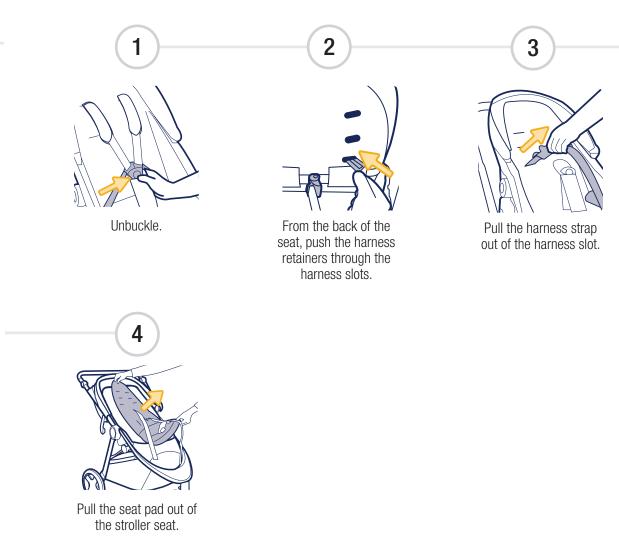

Installing Stroller Seat Pad Insert

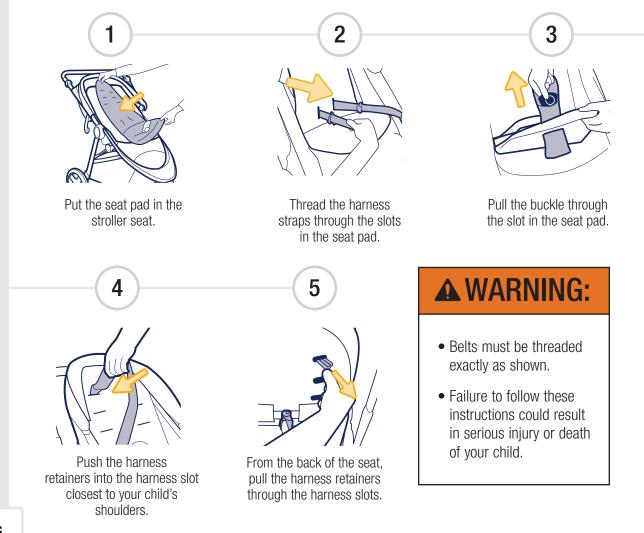


Cup Holder Use & Care


Cup Holder

Secure the cup holder to the attachment on either side of the stroller as shown. The cup holder is top-rack dishwasher safe.



Wash & Care of Stroller Parts

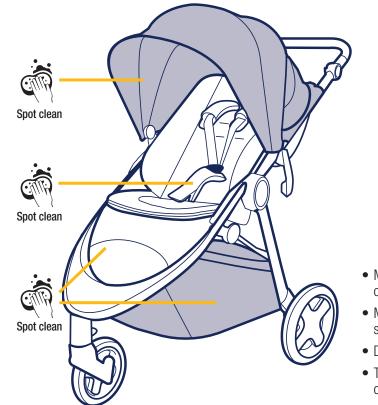

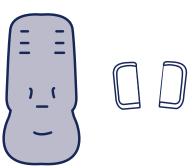

Cleaning Stroller Seat Pad Insert & Harness Covers

- Machine wash separately with cold water on a gentle cycle.
- Make sure the harness covers are closed so the fastening strips are not exposed.
- Do not use bleach.
- Tumble dry separately for 10-12 minutes on low heat.
- Remove immediately.

Dorel Juvenile Group Information

Thank you for choosing this stroller.

The DJG family is committed to creating strollers with the most comfort and convenience available today.

If you have questions or any concerns with this stroller, please contact our Consumer Care Department.

For parts availability and questions, please contact us via phone, text, or chat.

Include the model number and manufacture date (found on a sticker on the stroller frame) and a brief description of the part.

- Rear Wheels (2)
- Front Swivel Wheel (1)
- Harness Covers (2)
- Cup Holder
- Stroller Seat Pad Insert
- Car Seat Adapters




Call: 1-800-951-4113

Text: 1-812-652-2525



Chat: www.maxicosi.com

Hours of Operation: M-TH: 8:00 AM - 6:00 PM EST FRI: 8:00 AM - 4:30 PM EST

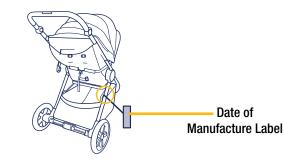

Two-Year Limited Warranty

Dorel Juvenile Group, Inc. warrants to the original purchaser that this product (Gia XP 3-Wheel Stroller), is free from material and workmanship defects when used under normal conditions for a period of two (2) years from the date of purchase. Should the product contain defects in material or workmanship Dorel Juvenile Group, Inc., will repair or replace the product, at our option, free of charge. Purchaser will be responsible for all costs associated with packaging and shipping the product to Dorel Juvenile Group will bear the cost of shipping the repaired or replaced nor the back of this document and all other freight or insurance costs associated with the return. Dorel Juvenile Group will bear the cost of shipping the repaired or replaced product to the purchaser. Product should be returned in its original package accompanied by a proof of purchase, either a sales receipt or other proof that the product is within the warranty period. This warranty is void if the owner repairs or modifies the product has been damaged as a result of misuse. This warranty excludes any liability other than that expressly stated previously, including but not limited to, any incidental or inconsequential damages. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT MAY VARY FROM STATE TO STATE.



©2021 Dorel Juvenile Group, Inc. (800) 951-4113 www.maxicosi.com. Styles and colors may vary. Les styles et les couleurs peuvent varier. Made in China Fabriqué en Chine. Distributed by (distribué par) Dorel Juvenile Group, Inc., 2525 State St., Columbus, IN 47201-7494. Dorel Juvenile Canada, 2855 Argentia Road, Unit 4, Mississauga, ON L5N 8G6. Importado y Distribuido en Chile por: Comercial e Industrial Silfa S.A. - San Ignacio 0201 / Parque Industrial Portezuelo Quilicura, Santiago Chile. Fono (562) 2339 9000. En Perú por: Comexa S.A. - Los Libertadores 455 - San Isidro, Lima - Perú. Fono (511) 4469014. En Centro América, Caribe y Ecuador por: Best Brands Group S.A. - Av. Balboa, Bay Mall Plaza, Planta Baja, local 9, Panamá. - Fono: (507) 300 2884. En Colombia por: Baby Universe S.A.S. - Vía 40 No. 77-29, Barranquilla, Colombia - Fono: (575) 353 1110 Importador: DJGM, S.A. DE C.V. Gabriel Mancera No. 1041 Col. Del Valle, Benito Juárez C.P. 03100 México, Ciudad de México R.F.C. DJG140305GN9 Tel. (55) 67199202 03/21 4358-8148

DOREL

www.maxicosi.com